

Manual

welldana

PL-REM-200



12-09-22

LINK Driver

Table of contents

Technical specifications	Page 3
Box contents	Page 4
Installation instructions	Page 5
Pairing Handheld Transmitter & controller	Page 6
Handheld transmitter functions	Page 7
Replacing transmitter battery	Page 7
Troubleshooting	Page 7



Technical specifications

Electrical specifications

Nominal Input voltage
Output voltage on Lamp Output
Max output current on Lamp Output
Max rating Relay Contact A and B
Resistive Load

Inductive Load

Transformer VA rating Fuse type

Frequency band transmitter IEC Protection Class

230 VAC 50 Hz

12 VAC 16,7 A

14A 250VAC 14A 30VDC 6A 250VAC 6A 30VDC 200VA

5x20mm cartridge fuse 5A 250V slow blow/time lag

868 MHz Class II

General specifications Controller

Ambient air temperature Humidity

Dimensions Weight Ingress protection rate 0°C ... +40°C 10% ... 90% RH non condensing 195x194x90 mm 3,2 kg

1P54

Box contents

- 1. PL-REM-200 controller
- 2. Handheld transmitter (DuraLink™ version)
- 3. Spare battery (type A23 12V)
- 4. Screws (4x) & wall plugs (4x)
- 5. Owners's manual




Installation instructions

- Connect a 230VAC power source to the "220-240VAC INPUT" terminal
- Connect the swimming pool lights to the "Lamp 12VAC output" terminal

Make sure the total load of pool lights does not exceed 200Watt

Optional: The "Switch A" & "switch B" terminals can be used to control auxiliary circuits like a pool cover or garden lights.

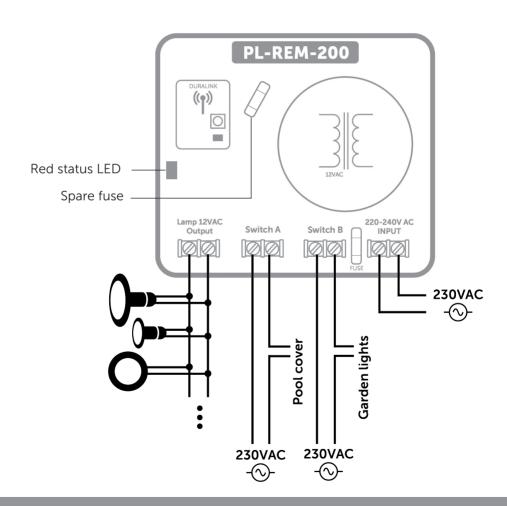

Pairing handheld transmitter & controller

The handheld transmitter is already paired in the factory and ready to use. The PL-REM-200 can pair with up to 6 handheld transmitters. In case a problem arises, the pairing process can be done manually:

Manual Pairing process:


Make sure the PL-REM-200 is connected to a power source.

- 1. Press the pairing button on the small circuit board, inside the controller for at least 5 seconds.
 - --> The LED will start to blink fast
- 2. Within 25 seconds, press any button on the handheld transmitter.
 - --> If the transmitter is paired correctly, the LED will flash slowly for 5 times
 - --> If the PL-REM-200 pairing memory is full, the LED will flash 15 times. This means 6 handheld devices have already been paired.


To unpair all handheld transmitters with the controller: Push the pairing button for at least 5 seconds, then do nothing for at least 25 seconds.

--> The pair memory will be erased - the green LED will flash 5x on/off.

⚠ If no transmitters are paired, the PL-REM-200 will accept messages from any transmitter!

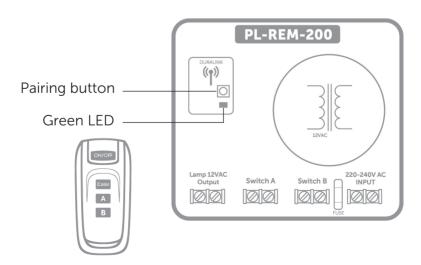

Handheld transmitter functions

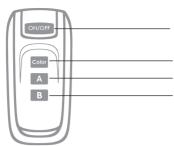

Toggle the lamps ON/OFF

Go to next color scenario Toggle Output A ON/OFF Toggle Output B ON/OFF

Replacing transmitter battery

- Remove the philips head screw and open the transmitter
- Replace the battery, respecting the polarity Battery type: A23 12V





Troubleshooting

PROBLEM

The controller doesn't react to transmitter commands

SOLUTION


- Check the battery of the handheld transmitter
- The transmitter is not pairedcorrectly with the controller. Repeat the pairing process
- Reduce the distance between handheld transmitter and PL-REM-200 and/or remove obstacles

The pool lights don't work

- Check the red status LED
- Check if there is 12VAC output at the terminals of the controller
- Check the fuse of the controller If the fuse is ok, and there is still no 12VAC output, contact your distributor

Declaraction of Conformity

Declarations of conformity covering this product are available for download from the House of Duratech website: www.duratech.be

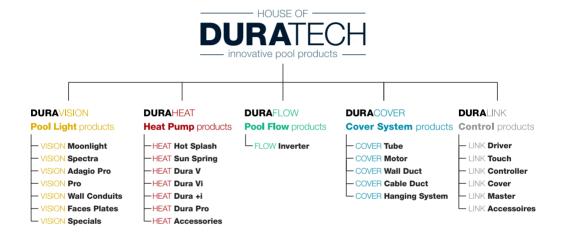



Contact details

Propulsion Systems bv

Dooren 72 1785 Merchtem, Belgium

Tel +32 2 461 02 53

www.duratech.be info@propulsionsystems.be





