

ASSEMBLY INSTRUCTION POOL COVER SECURITY



The mounting kit contains:

1. The delivered cover roll contains the reinforcing aluminium pipes.




2. The crank with transmission to roll up the cover.



3. Fixing screw in the cover with pull-out stop.



4. Fastening parts of stainless steel 316L.

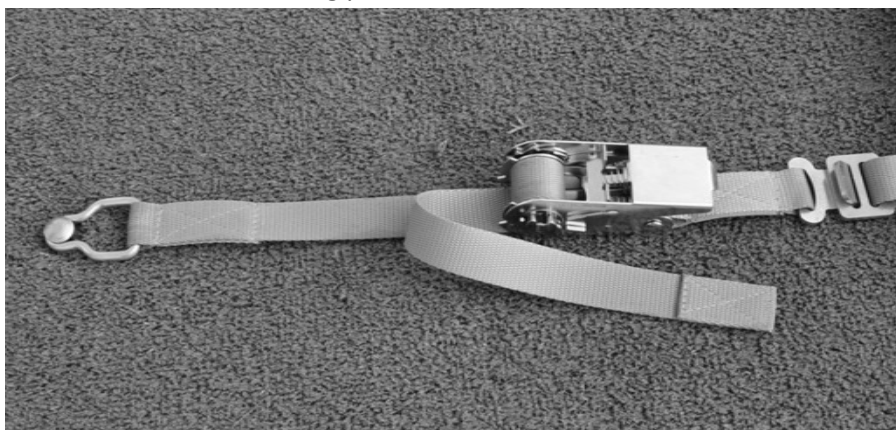

The product complies with NF P 90-308.

ASSEMBLY INSTRUCTIONS

1. Lay the cover on the end of the pool, where it should rest when rolled up.



2. Unroll the cover.




3. Determine the location of the cover to correctly locate the holes. Take into account the requirements of the overlay of 20 cm per side.

4. Please start the fastening on the side of the storage of the cover in the rolled-up state (swimming pool open). Place the straps in the desired position, then tighten the adjustment screw with a 2 mm Allen key.




Drilling with the \varnothing 10 mm drill, at a distance of 100 mm from the cover.

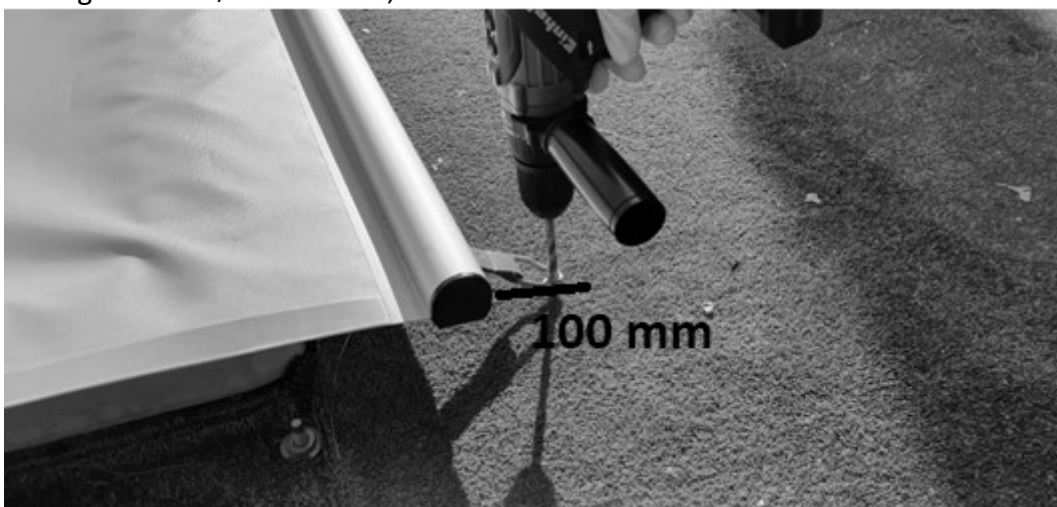

5. Insert the screw with the shell with the hammer.



6. Remove the screw by hand and place the attachment around the screw.

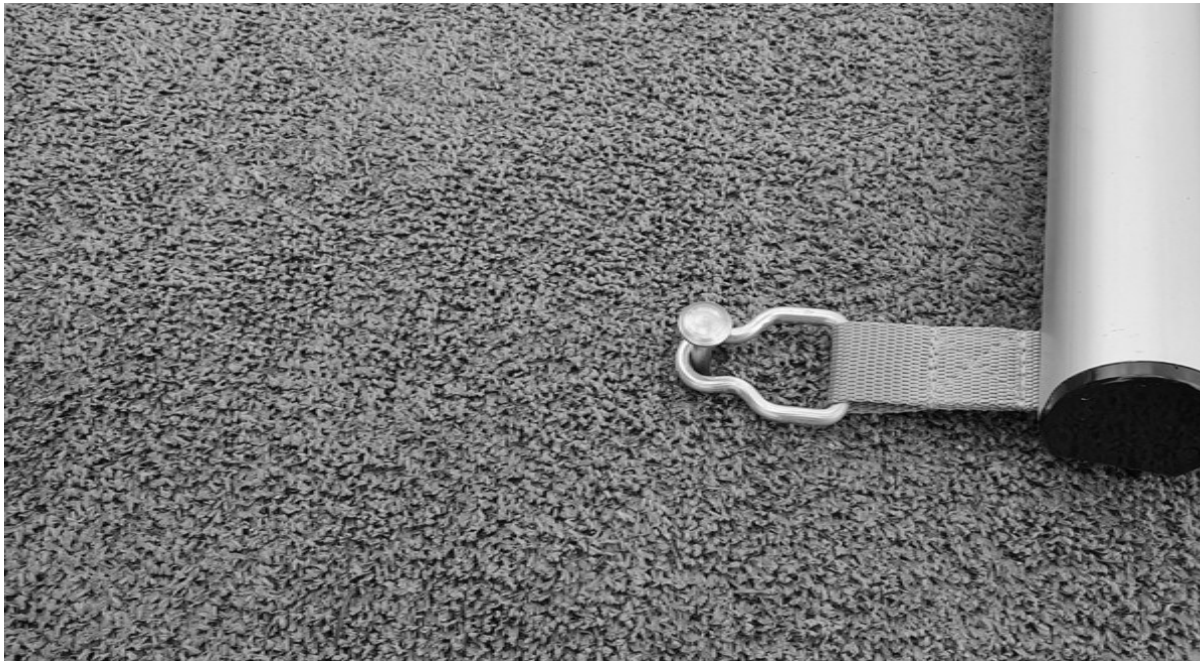

7. Set the pull-out belt attachment in the middle position (fastening with slot), tighten the locking screw with a 2 mm Allen key and then attach the pull-out belt to it.




Fastening with slot only for attaching the pull-out belt!


8. Place the straps in the desired position and tighten the adjustment screw with a 2 mm Allen key.



Drilling at a distance of 350-600 mm from the cover on the side of the winding tube. Repeat steps 5 and 6.

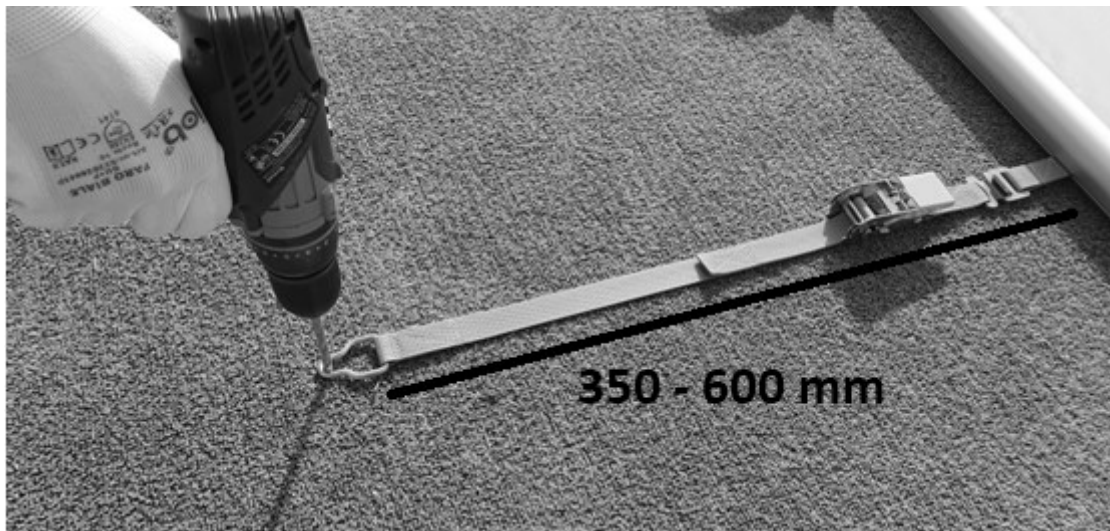

9. Please tighten the cover with the clamp.

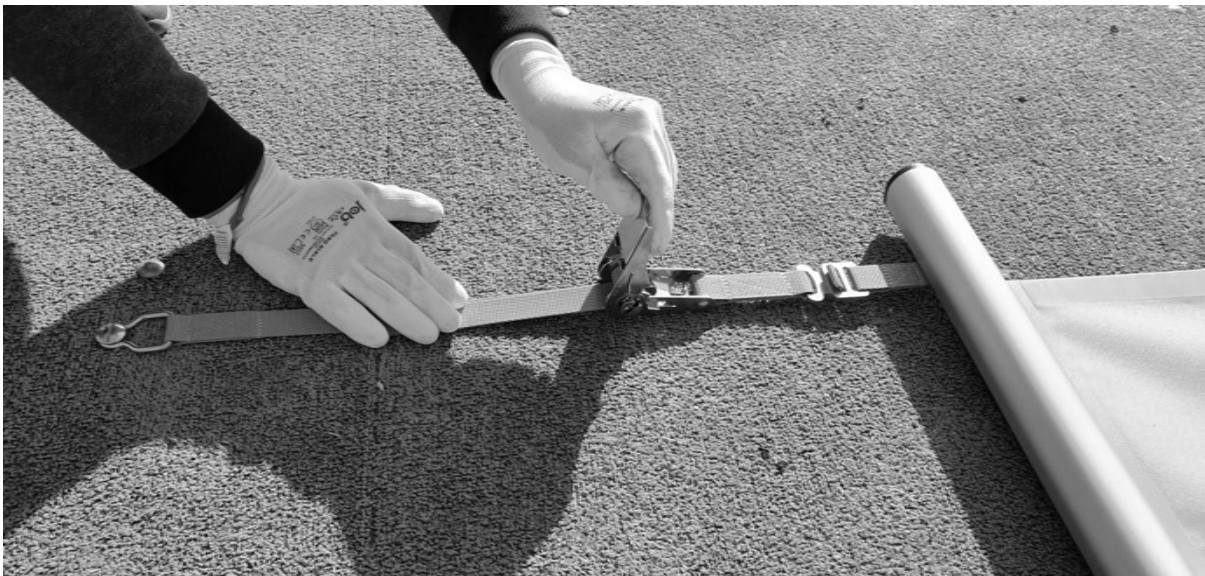

10. The assembly of the cover is completed.

INSTRUCTIONS FOR USE

The swimming pool is a danger to children. Child monitoring near the swimming pool must be ensured. Please observe the swimming pool while the cover is being rolled up and unrolled.

ROLLING UP

The cover should be rolled up by a responsible adult according to the following instructions. During the short absence of the caregiver, it is advisable to cover the swimming pool for safety reasons.

1. Remove the clamp tension by 180 ° around the handle and pull on the frame of the clamp. Remove the hook from the holder.
2. Remove the straps from the screw head.
3. Bring the clamps to the place of storage. Do not lay in the tarpaulin, this can lead to damage.
4. Place the trigger belt in the center of the cover so that the rolling cover will take it along in the middle.
5. Insert the crank end into the receiving hole of the winding tube.
6. Wrap the cover with the crank.

UNCURL

Before rolling off the cover, please check whether there are any persons or objects in the swimming pool.

1. Pick up the extraction belt and go to the opposite side of the pool.
2. Pull the strap with feel and roll out the cover.
3. Place the clamps, hook the band onto the screw heads and hooks and tighten the clamps.
4. Keep the crank out of the reach of the child.

SAFETY INSTRUCTIONS

Roll Cover as a safety cover serves its purpose when properly mounted and tensioned when the clamps are in the closed position. The roll cover does not relieve the need for the use of common sense and individual responsibility in use. It does not have the purpose of relieving parents and guardians of the duty to supervise the children. The roll protection cover is not designed for voluntary walking or jumping.

CARE

The pool cover security should be washed at least twice a year with a PVC-compatible care product, preferably before and after the bathing season. You can clean them with pressure washer or mop. Please avoid aggressive cleaning agents or scouring pads.

TECHNICAL ADVICE

The entire cover and its fasteners should be inspected twice a year, preferably during the cleaning. Additional control is required if the cover was used for rescue purposes or after a bad weather period (heavy snowfall, storm). Any damaged elements should be replaced or supplemented with original LIDERPOOL parts.

NOTICE FOR AUTUMN AND WINTER

The pool cover security protects the swimming pool even in winter. The snow cover over 10 cm should be removed with a broom or mop from the surface. Care should be taken that the water level in the pool does not increase and the cover is not flooded. Heavy soiling, which can lead to blockage of the water drainage holes, should be removed from the surface with a broom, so that no water puddles can form. Failure to follow these instructions will void your warranty.

WARRANTY

General warranty time is 3 years for the following parts: PVC fabric, aluminum profiles, stainless steel fasteners, clamps and straps.

The warranty period for the crank is 1 year.

The warranty period for the electric crank is 1 year for the mechanical parts and 6 months for the electric parts. The batteries are not guaranteed.

WARRANTY CONDITIONS

Only the invoice serves as a valid guarantee. The warranty covers all costs of replacement or breakage of materials if they occurred during the manufacturing period and are not the result of direct or indirect fault impact. If Liderpool's warranty claims have been reviewed and accepted, only the parts directly related to the warranty will be replaced or a compensation payment will be made. A written warranty claim must be filed within 7 days of error observation.

The costs of assembly, disassembly and transport are not covered by the warranty.

A change in color shading can not be considered a mistake because it is a product inherent property. In addition, the consequences of poor installation, failure to follow instructions for use, normal abrasion on sharp stones or protruding parts, excessive tension are not covered by the warranty.